

LEDpool light Remote Control  
with built in transformer

# OWNER'S MANUAL

## PL-REM-200

Long range DuraLink™ version



Controls Spectravisision Pool Lights  
and 2 auxiliary circuits


## Table of contents

Technical specifications	Page 3
Box contents	Page 4
Installation instructions	Page 5
Pairing Handheld Transmitter & controller	Page 6
Handheld transmitter functions	Page 7
Replacing transmitter battery	Page 7
Troubleshooting	Page 7



## Technical specifications

### Electrical specifications



Nominal Input voltage	230 VAC 50 Hz
Output voltage on Lamp Output	12 VAC
Max output current on Lamp Output	16,7 A
Max rating Relay Contact A and B Resistive Load	14A 250VAC 14A 30VDC
Inductive Load	6A 250VAC 6A 30VDC
Transformer VA rating	200VA
Fuse type	5x20mm cartridge fuse 5A 250V slow blow/time lag
Frequency band transmitter	868 MHz
IEC Protection Class	Class II 

### General specifications Controller

Ambient air temperature	0°C ... +40°C
Humidity	10% ... 90% RH non condensing
Dimensions	195x194x90 mm
Weight	3,2 kg
Ingress protection rate	IP54

## Box contents

1. PL-REM-200 controller
2. Handheld transmitter (DuraLink™ version)
3. Spare battery (type A23 12V)
4. Screws (4x) & wall plugs (4x)
5. Owners's manual

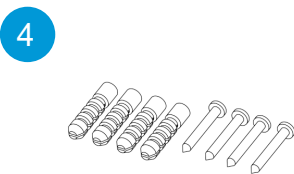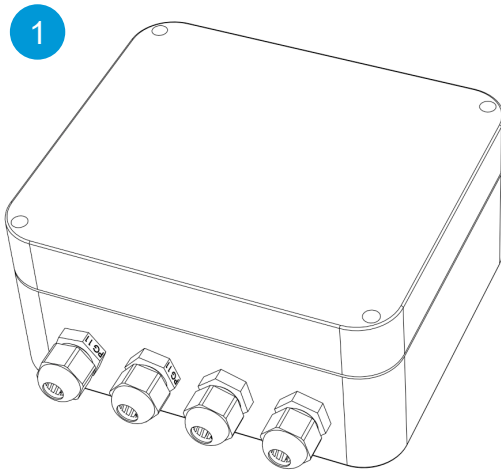


## Installation instructions

- Connect a 230VAC power source to the “220-240VAC INPUT” terminal
- Connect the swimming pool lights to the “Lamp 12VAC output” terminal

⚠ Make sure the total load of pool lights does not exceed 200Watt

*Optional:* The “Switch A” & “switch B” terminals can be used to control auxiliary circuits like a pool cover or garden lights.

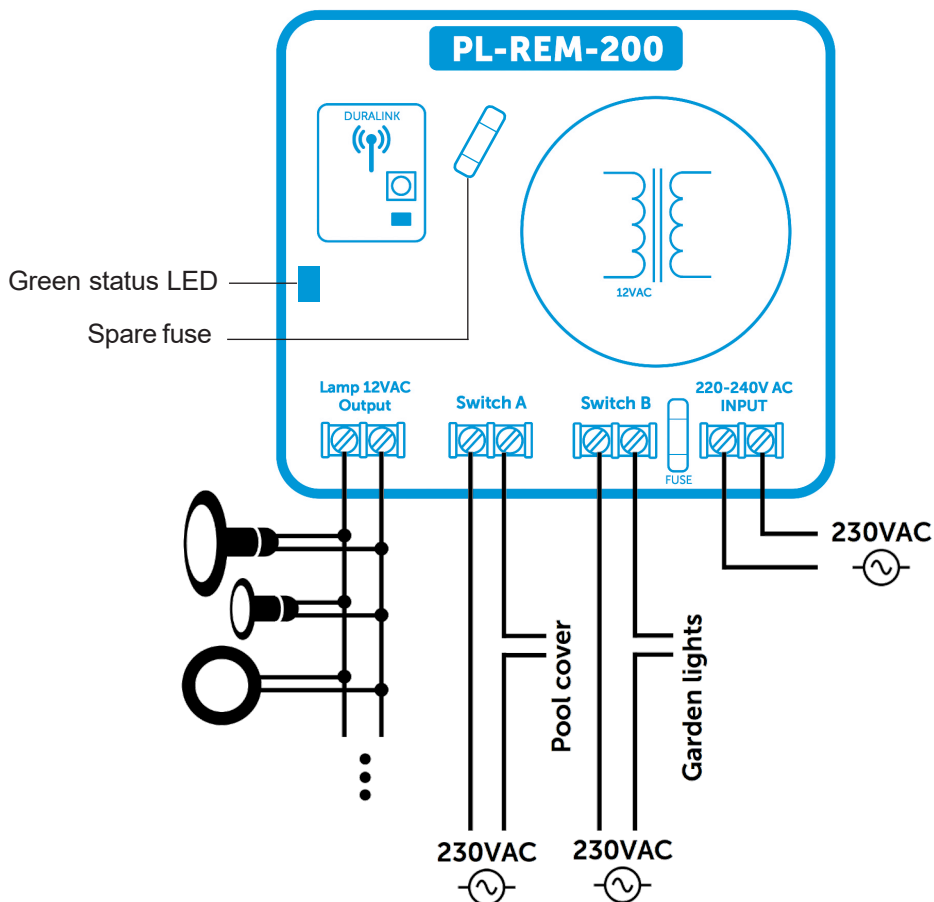

## Pairing handheld transmitter & controller

The handheld transmitter is already paired in the factory and ready to use. The PL-REM-200 can pair with up to 6 handheld transmitters. In case a problem arises, the pairing process can be done manually:

### *Manual Pairing process:*

Make sure the PL-REM-200 is connected to a power source.

1. Press the pairing button on the small circuit board, inside the controller for at least 5 seconds.

--> The LED will start to blink fast


2. Within 25 seconds, press any button on the handheld transmitter.

--> If the transmitter is paired correctly, the LED will flash slowly for 5 times


--> If the PL-REM-200 pairing memory is full, the LED will flash 15 times.  
This means 6 handheld devices have already been paired.

To unpair all handheld transmitters with the controller: Push the pairing button for at least 5 seconds, then do nothing for at least 25 seconds.

--> The pair memory will be erased- the red LED will flash 5x on/off.


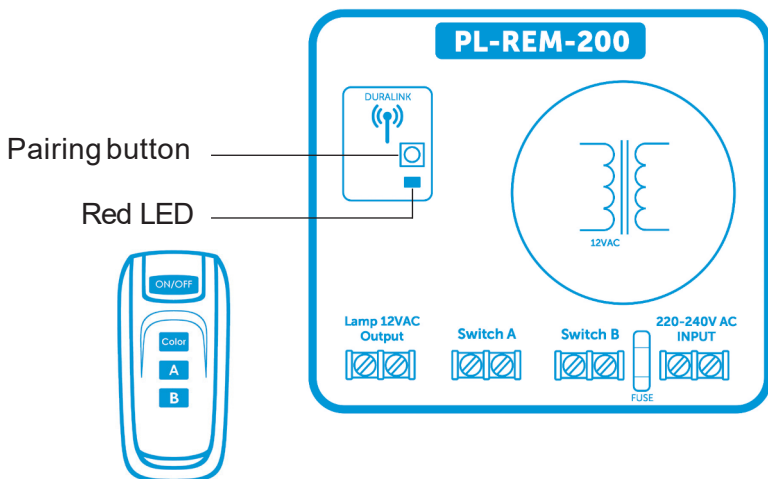


## Handheld transmitter functions

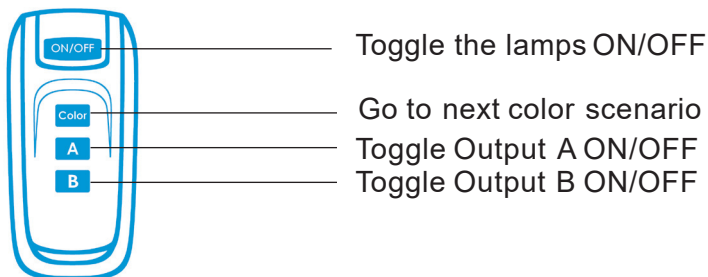

## Replacing transmitter battery

- Remove the philips head screw and open the transmitter
  - Replace the battery, respecting the polarity
- Battery type: A23 12V*

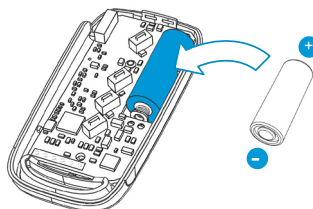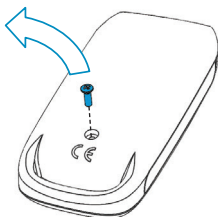

## Troubleshooting

### PROBLEM

The controller doesn't react to transmitter commands

### SOLUTION

- Check the battery of the handheld transmitter
- The transmitter is not paired correctly with the controller. Repeat the pairing process
- Reduce the distance between handheld transmitter and PL-REM-200 and/or remove obstacles

The pool lights don't work

- Check the green status LED
- Check if there is 12VAC output at the terminals of the controller
- Check the fuse of the controller

If the fuse is ok, and there is still no 12VAC output, contact your distributor

## Contact details

Propulsion Systemsbvba  
Dooren 72  
1785 Merchtem, Belgium

Tel +32 2 461 02 53  
Fax+32 2 706 59 60

[www.propulsionsystems.be](http://www.propulsionsystems.be)  
[info@propulsionsystems.be](mailto:info@propulsionsystems.be)





*Wasser ist unser Leben*

**GARTEN**

Ihr Teich und Pool Profi

Koigarten Müller Randenstr. 4 88605 Meßkirch

[www.koigarten-mueller.de](http://www.koigarten-mueller.de) VERTRAGSHÄNDLER

We reservethe rights to change all or part of the contents of this document without prior notice